


# URBAN BARN

## USE AND CARE GUIDE

---

216639 STANLEY FLOOR LAMP

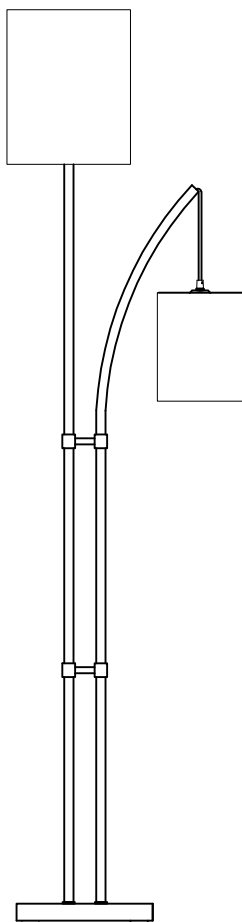

# Table of Contents

---

Safety Information .....	2
Pre-Installation .....	3
Planning Installation .....	3
Package Contents .....	3
Assembly .....	4, 5, 6
Care and Cleaning .....	7
Troubleshooting .....	7

## Safety Information

---

- Consult a qualified electrician with any electrical questions you may have.



**IMPORTANT:** Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process.


# Pre-Installation

## PLANNING INSTALLATION


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.

 **NOTE:** This lamp requires the use of one 120V, 60Hz, 100-Watt max, medium-base type A bulb (not included) and one 120V, 60Hz, 60-Watt max, medium-base type A bulb (not included). Do not exceed the recommended wattage.

## PACKAGE CONTENTS

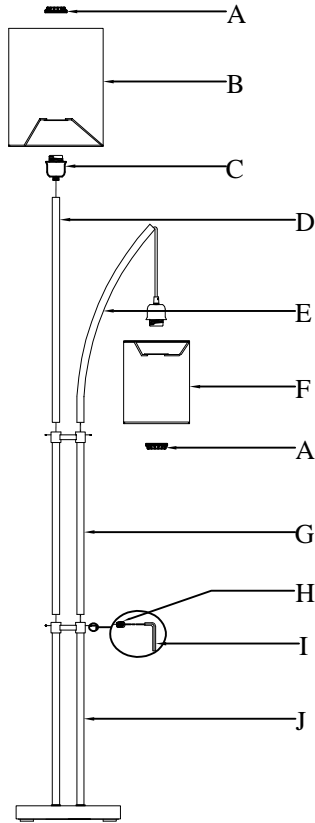

Part	Description	Quantity
A	Socket ring	2
B	Larger shade	1
C	Socket assembly	1
D	Upper pole	1
E	Arm	1


Part	Description	Quantity
F	Smaller shade	1
G	Lower pole assembly	1
H	Set screw	4
I	Allen wrench	1
J	Base assembly	1

# Assembly instructions

---

## 1. Unpack the lamp and lower pole assembly


- Carefully organize and place all parts on a smooth, flat surface. Line up all of the parts according to the assembly diagram.
- Insert lower pole assembly (G) into base assembly (J) and secure with (2) set screws (H). (Allen wrench (I) included).

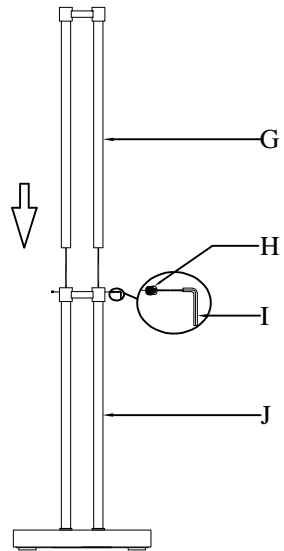

---

## 2. Assemble the arm

- Insert the arm (E) into lower pole assembly (G) and secure with the set screw (H). (Allen wrench (I) included).

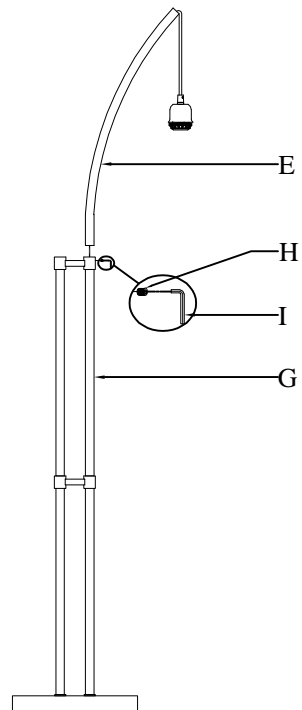


# Assembly instructions (continued)

---

## 3. Assemble the socket assembly


- Screw the upper pole (D) to bottom of the socket assembly (C).

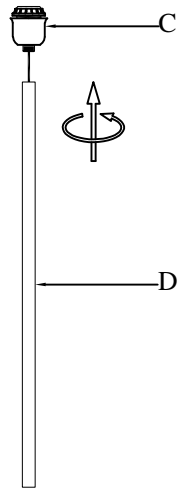

---

## 4. Assemble the upper pole

- Tuck the excess power cord and insert the excess power cord into the holes in upper pole (D). (See the diagram on right)
- Insert upper pole (D) into lower pole assembly (G) and secure with set screw (H). (Allen wrench (I) included).

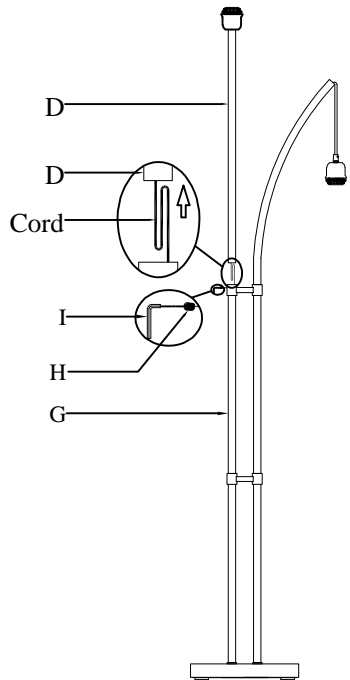


# Assembly instructions (continued)

---

## 5. Install the bulbs

- Remove the socket rings (A) from sockets by unscrewing the socket rings (A).
- Place the smaller shade (F) over lower socket and secure one socket ring (A).
- Place the larger shade (B) over the upper socket and secure with one socket ring (A).
- Prior to installing the bulbs, inspect sockets for silica packet. If packet is present, then remove and throw away. Do not expose it to children or pets.
- Install one 120V, 60Hz, 60-watt max. medium-base type A bulb (not included) into the lower socket.
- Install one 120V, 60Hz, 100-watt max. medium-base type A bulb (not included) into the upper socket.
- Plug cord into an outlet and turn on at the switch.

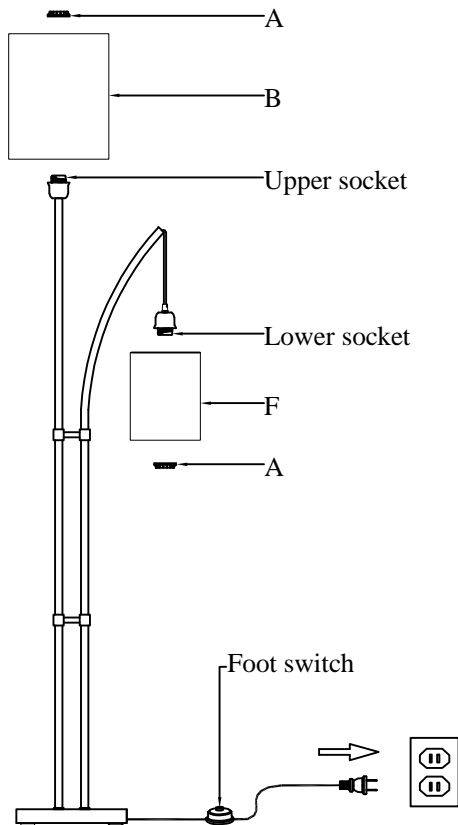

# Important safety instructions

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

# Care and Cleaning

Clean the lamp with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

# Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	<input type="checkbox"/> The bulb is burned out.	<input type="checkbox"/> Replace the light bulb.
	<input type="checkbox"/> The power is off.	<input type="checkbox"/> Ensure that the power supply is turned on.
	<input type="checkbox"/> Did not insert plug into power outlet.	<input type="checkbox"/> Ensure that the plug is fully and properly inserted into the power outlet.
	<input type="checkbox"/> The circuit breaker is off.	<input type="checkbox"/> Ensure that the circuit breaker is set in the on position.
The fuse blows or a circuit breaker trips when the light is turned on.	<input type="checkbox"/> There is an exposed wire.	<input type="checkbox"/> Discontinue use of the lamp.
	<input type="checkbox"/> There are too many items on one circuit.	<input type="checkbox"/> Unplug other items on the circuit.

# URBAN BARN