

Xavier Dining Chair

Chaise Xavier

URBAN BARN






Assembly Instructions / Instructions d'assemblage

Please follow instructions closely as deviation from these instructions may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage during assembly.

Suivre attentivement ces instructions. Le non-respect de ces instructions pourrait poser un risque pour la sécurité et invalider votre garantie.

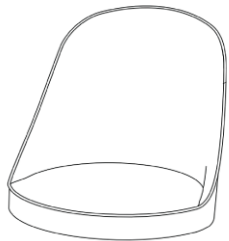Il est recommandé d'assembler le produit sur une surface souple comme un tapis pour éviter d'endommager le produit pendant l'assemblage.


Ref. / Réf.	Hardware List / Liste du matériel		Qty / Qté
1	Seating / Siège		1
2	Legs / Pattes		1
A	Bolt M6 x 38 mm / Boulon M6 x 38 mm		4
B	Washer / Rondelle		4
C	Allen Key / Clé Allen		1

URBAN BARN


Step 1 / Étape 1

Placed the Seating (1) upside down and attach the Legs (2) using Bolts (A) and Washers (B). Tighten the Bolts with the Allen Key (C).

Placer le siège (1) à l'envers. Rattacher les pattes (2) et sécuriser en vissant les boulons Allen (A) d'abord passés dans une rondelle (B), à l'aide de la clé Allen (C).

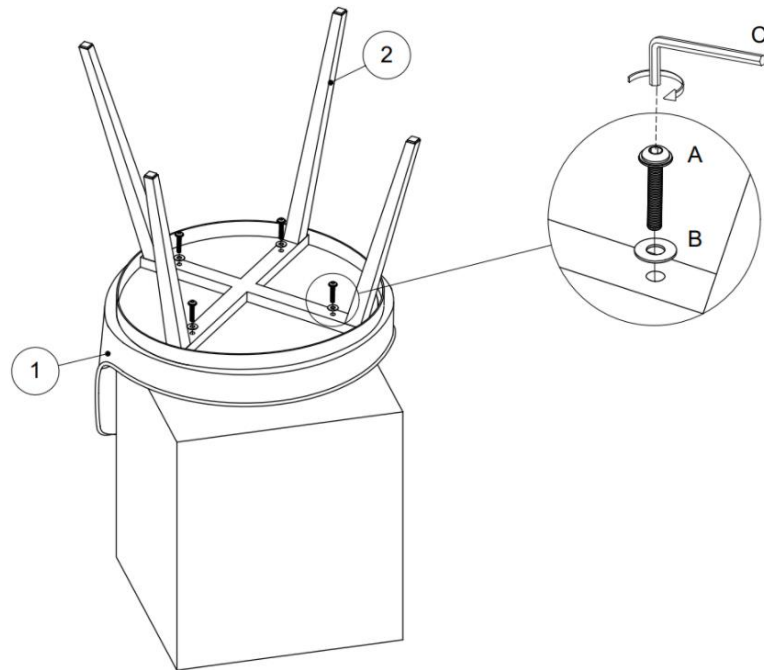

Assembled / Chaise assemblée

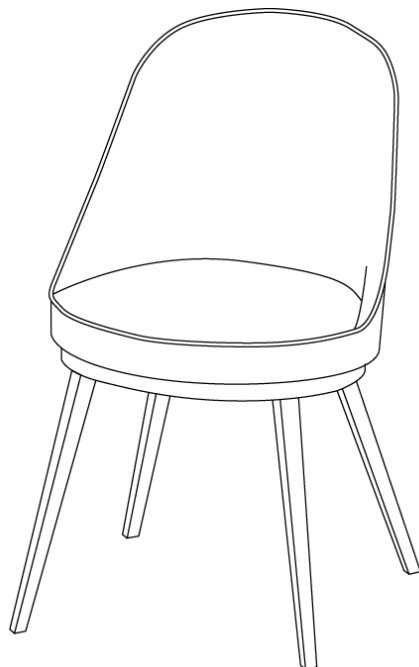

URBAN BARN

Maximum weight limit is 110 kg / 300 lbs



Always ensure that the feet or felt pads provided with this product are suitable for your flooring. Periodically check the position of the foot caps or felt pads to ensure your floors remain protected.

For products assembled with screws, it is important to re-tighten them 2 weeks after assembly, and then every 3 months thereafter, to maintain stability throughout the lifespan of the product.

Capacité de poids maximale : 110 kg/300 lb



S'assurer que les pieds ou coussinets de feutre fournis avec le produit sont appropriés pour le type de plancher. Vérifier régulièrement le positionnement des pieds ou coussinets de feutre pour assurer une protection continue de la surface de plancher.

Pour les produits assemblés à l'aide de vis ou boulons, resserrer ceux-ci après deux semaines d'utilisation du produit, puis aux trois mois par la suite, pour assurer la stabilité continue du meuble.