

# Brooks Office Chair Fauteuil de bureau Brooks

# URBAN BARN

## Assembly Instructions / Instructions d'assemblage

Please follow instructions closely as deviation from these instructions may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage during assembly.



Suivre attentivement ces instructions. Le non-respect de ces instructions pourrait poser un risque pour la sécurité et invalider votre garantie.

Il est recommandé d'assembler le produit sur une surface souple comme un tapis pour éviter d'endommager le produit pendant l'assemblage.

| Ref. / Réf. | Hardware List / Liste du matériel                | Qty / Qté |
|-------------|--|-----------|
| A           | Allen Key / Clé Allen                            | 1         |
| B           | Flat Head Bolt M6X16 / Boulon à tête plate M6x16 | 4         |
| C           | Washer / Rondelle                                | 4         |

### Step 1 / Étape 1

### Assembled / Fauteuil assemblé

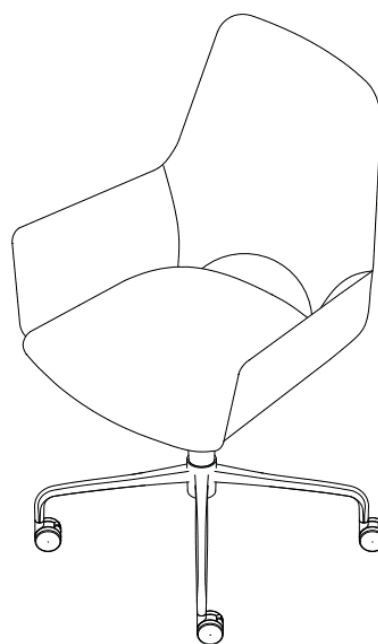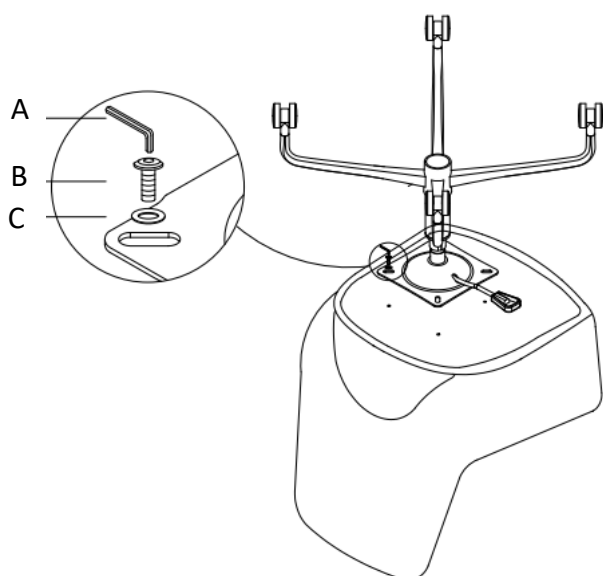

# URBAN BARN