


Kenzie Dining Chair

Assembly Instructions

URBAN BARN

Parts Packing Configurations


- A. Seat Frame 1 pc
- B. Back Frame 1 pc
- C. Back Cushion 1 pc
- D. Seat Cushion 1 pc

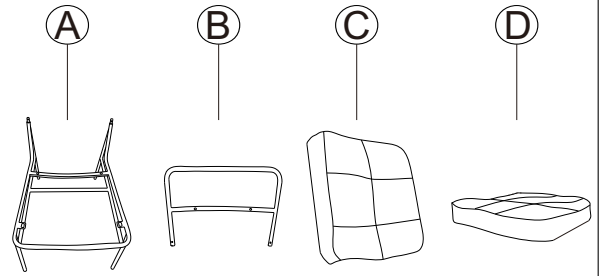


Hardware kit packed in box

No.	Description	Image	Qty
1	Flat Washer (M6)		4 PCS
2	Allen Bolt (6x20mm)		2 PCS
3	Allen Bolt (6x35mm)		2 PCS
4	Lock Washer (M6)		4 PCS
5	Allen Bolt (6x12mm)		2 PCS
6	Allen Bolt (6x35mm)		2 PCS
7	Allen Key (S4)		1 PC


Fully Assembled

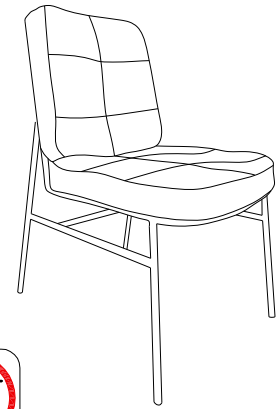


Step 1:

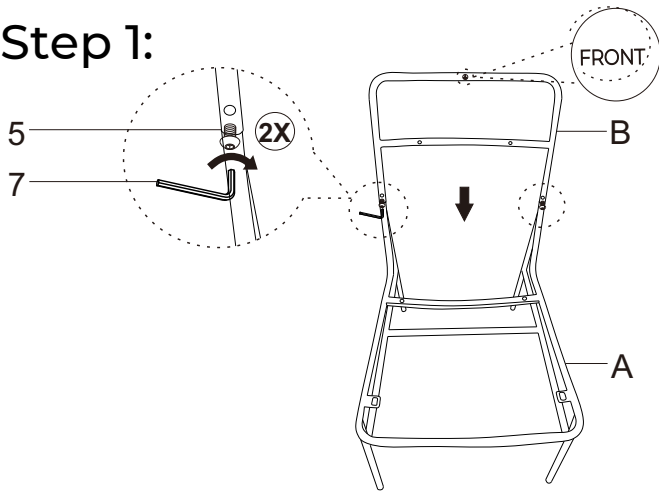


Step 2:

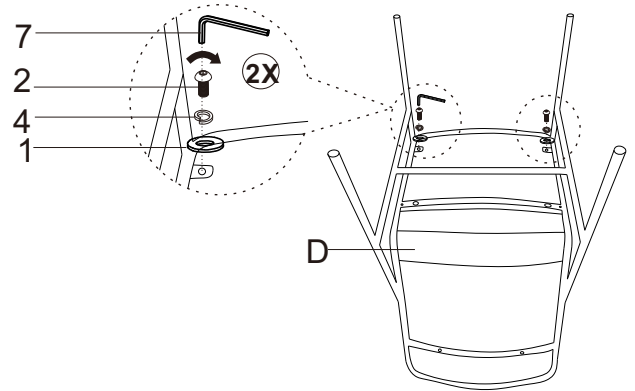


Step 3:

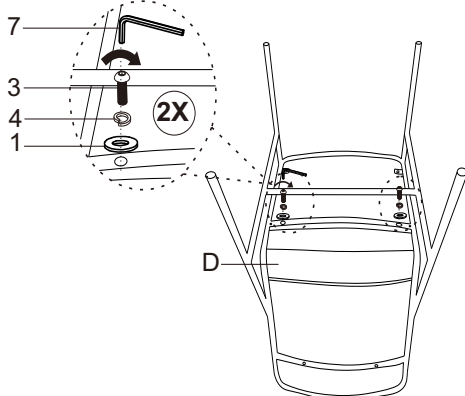

Step 4:

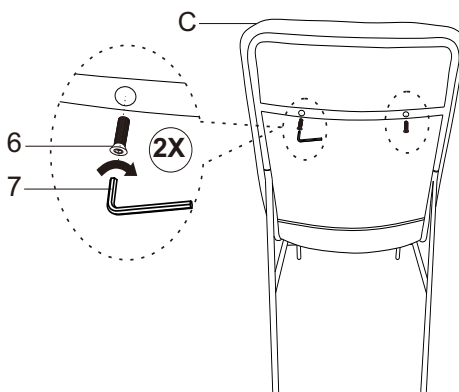

Step 5:

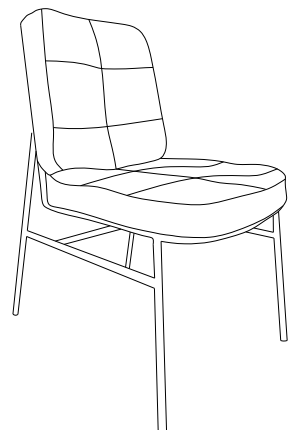

Assembly Complete


Chaise Kenzie

Instructions d'assemblage

URBAN BARN

Pièces


- A. Structure du siège x1
- B. Structure du dossier x1
- C. Coussin de dossier x1
- D. Coussin de siège x1

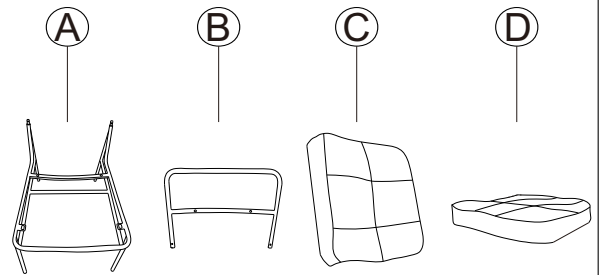


Quincaillerie incluse dans la boîte

No.	Description	Image	Qté
1	Rondelle plate (m6)		x4
2	Boulon Allen (6x20mm)		x2
3	Boulon Allen (6x35mm)		x2
4	Rondelle d'arrêt (m6)		x4
5	Boulon Allen (6x12mm)		x2
6	Boulon Allen (6x35mm)		x2
7	Clé Allen (s4)		x1


Meuble assemblé

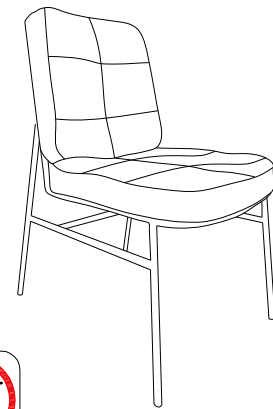


Étape 1 :

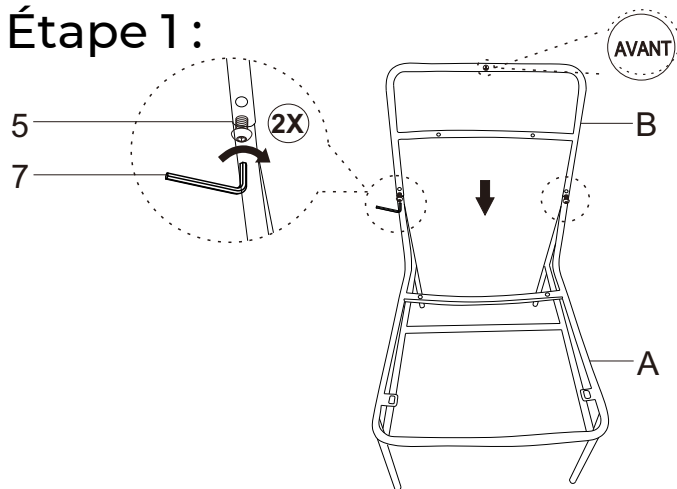


Étape 2 :

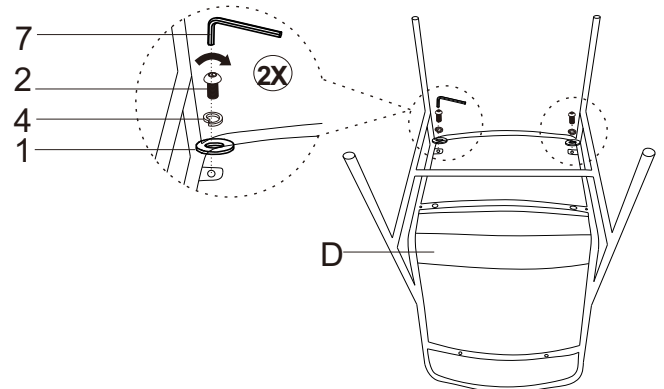


Étape 3 :

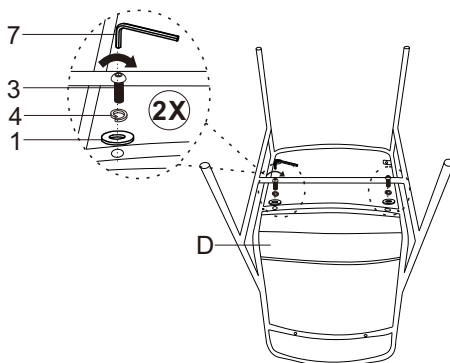

Étape 4 :

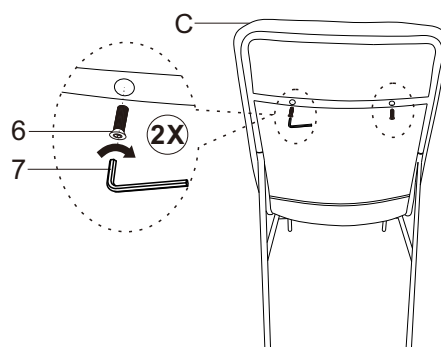

Étape 5 :

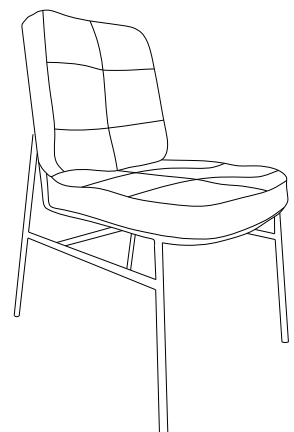

Assemblage complété